



Philips Aluminium
Collection
Pusher

Plastic

CP9164

to replace your current pusher

Find matching products on the specifications tab

The pusher is the tube on top of the lid of your food processor, through which you can put the ingredients. It's easily removable, so it's easy to clean!

Ease of using Philips spare parts

- Renew your product with original Philips parts

PHILIPS
sense **and** simplicity

Pusher
Plastic

CP9164/01

Specifications

Replaceable part

- Fits product types: HR1861/00, HR1861/01,

HR1861/03

Highlights

Easy replacement

From time to time your product needs a facelift, and with Philips consumer replacement parts to renew your product, it's never been so easy! All this with guaranteed Philips quality and 1:1 exchange.



Issue date 2013-01-30

Version: 1.0.3

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com